


Installation Manual of Single end or Double end (Ballast Compatible) LED tubes

Single end LED tube

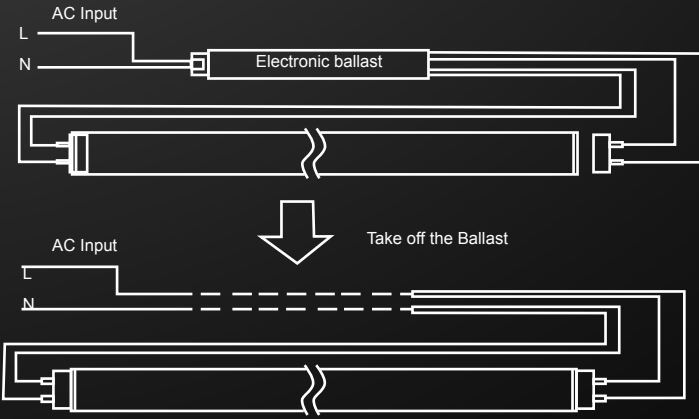

* Ballast must be removed from existing fitting.

Double end LED tube
(Ballast compatible model)



* No need to remove ballast. Just remove old tube and insert new one!

Important!

If your fittings have starters, make sure to remove them before inserting the new tube.

SENIORLED

